

# MALAGA COVE SCOREBOARD OPERATING INSTRUCTIONS

1. Turn on scoreboard using key-fob remote located in snack shack. **Board should display all “0’s.”**
2. Turn wireless controller to “ON”. **Red LED on controller indicator lights up. Scoreboard will flash all “1’s”** indicating communication with board.
3. Press/hold the “BASEBALL/HORN” button on the controller until the **board displays all “0’s.”**
4. Operate board using wireless controller from anywhere on field.
  - 4.1. After last game or on days with only one game: Turn wireless controller “OFF.” Go to step 5.
  - 4.2. To reset board for a new game: Press/hold “NEW GAME” button on wireless controller until **board displays all “0’s.”**
5. Put wireless controller back in snack shack.
6. Turn scoreboard “OFF” using the key-fob remote located in snack shack. **Board will turn off.**

Board should be operated by an adult scorekeeper only. Please be careful not to force or twist antenna.